

# FreeMotion

Reclining Furniture...Unplugged

by




freemotionbattery.com

## **Your FreeMotion PB bracket purchase includes:**

- (1) Universal FreeMotion battery bracket
- (4) Screws

**This product can be mounted in the back of a power reclining mechanism, under the backflap, and is designed to hold all FreeMotion batteries**

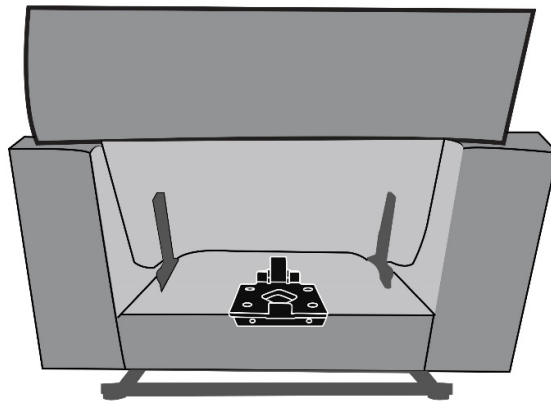

## Installation instructions for PB bracket

### Option #1 (your reclining furniture is Battery Ready by Parker House)

For Battery Ready products by Parker House, your power reclining furniture will have pre-drilled holes and screws in the back compartment, left side facing. Remove the screws from your furniture, insert the PB bracket (as shown in above illustration), then re-attach with the screws provided with your furniture. Your PB bracket is now ready to hold your FreeMotion battery. Follow your FreeMotion battery installation instructions to connect and power your recliners.

### Option #2 (your reclining furniture does not have predrilled holes or screws)

Open the backflap of left side facing back compartment. Your reclining furniture should have a wood frame that can accept the screws provided. Rest the PB bracket as show in above illustration. From the front, install 2 screws to the furniture frame. Your PB bracket is now ready to hold your FreeMotion battery. Follow your FreeMotion battery installation instructions to power your recliners.

For further information, including installation videos, please visit [www.freemotionbattery.com](http://www.freemotionbattery.com)