

FreeMotion

Reclining Furniture...Unplugged

by



freemotionbattery.com

Your FreeMotion Y3 Kit purchase includes:


- (2) Y-cables with one short side and one long side
- (1) Extension cable approximately 16.5' long
- (6) straps

This product is designed to connect three independent power reclining modular pieces. Below is a diagram of how your Y3 Kit could be used

Installation instructions for Y3 Kit


(please review both options to see which fits your needs)

Option #1

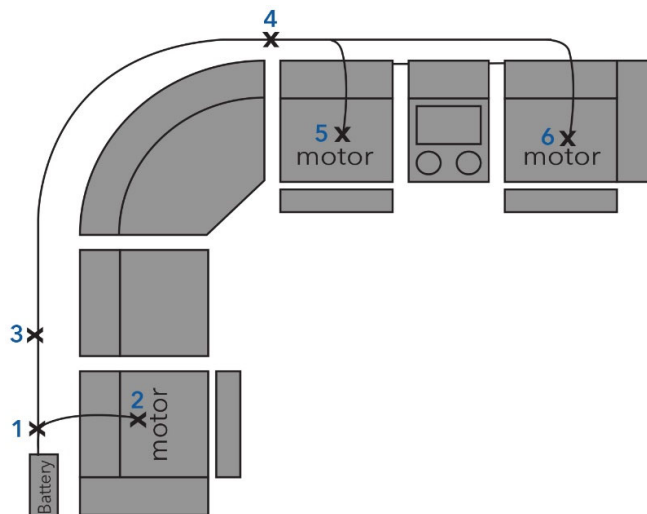

1. Connect base of the first Y-cable to FreeMotion battery.
2. Connect short side of first Y-cable to the motor(s) of the nearest independent power reclining modular piece.
3. Connect long side of Y-cable to one end of 16.5' extension cable
4. Connect other end of 16.5' extension cable to second Y-cable
5. Connect short side of second Y-cable to motor(s) of next independent power reclining modular piece
6. Connect long side of second Y-cable to motor(s) to last independent power reclining modular piece
7. Use the (6) straps provided to attach loose cords to the back of mechanisms for a clean look.

Option #2

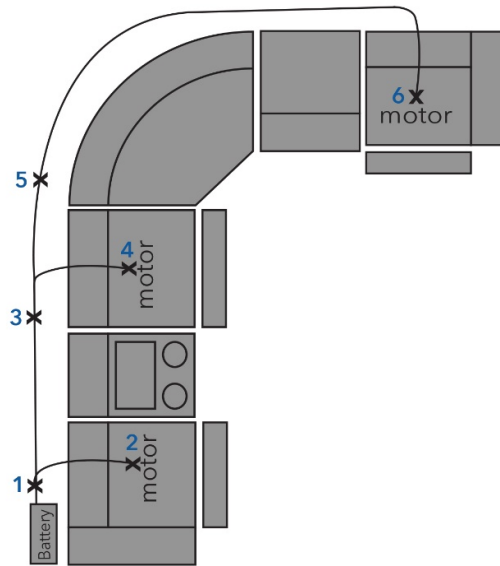

1. Connect base of the first Y-cable to FreeMotion battery.
2. Connect short side of first Y-cable to the motor(s) of the nearest independent power reclining modular piece.
3. Connect long side of first Y-cable to second Y-cable
4. Connect short side of second Y-cable to the motor(s) of the next independent power reclining modular piece.
5. Connect long side of second Y-cable to one end of 16.5' extension cable.
6. Connect other end of 16.5' extension cable to the motor(s) of the last independent power reclining modular piece.
7. Use the (6) straps provided to attach loose cords to the back of mechanisms for a clean look.

For further information, including installation videos, please visit www.freemotionbattery.com